

- This guide is for the Ethernet model but should be similar for all interfaces as long as the correct drivers are installed.
- Go to <u>http://www.starmicronics.com/support/default.aspx</u> and enter the details for the printer you have. Be sure to change the interface if you are not using Ethernet.



The page will load a list of drivers at the bottom. Download OPOS V1.13.8 for Windows (5.25MB) as shown below.



Now select the (Other Downloads) tab and download <u>Ethernet Setting Utility</u> (678KB). <u>This is</u> for Ethernet interface versions only.



Once both downloads have finished, navigate to your "Downloads" folder and right click on the file to select the (Extract All) option. Select "Extract" in the pop-up window.



- Once the files are extracted, open the <u>setupstarnic v300 xp-vista-w7-w8 20150415</u> folder and run the <u>setup utility</u>. Select "<u>Run"</u> at the prompt and agree to the terms and conditions. Select "<u>Next</u>" on each screen and then "<u>Install</u>" to finish.
- Once the above install is complete, open the opos 1.13.8 win32 20150408 folder and run the setup utility. Select "<u>Run</u>" at the prompt and then "<u>Next</u>" on each screen until the end. <u>The setup program</u> will automatically launch at the end of the install. Select "Exit" to close the installer as we do not have the port (IP) needed yet to configure the printer.

You should now have the following icon on your desktop called <u>SetupStarNIC</u>. Double Click the icon to open the utility.



etup Utility for StarNIC (Ethern	net I/F Card, DK-AirCash	n)	Trouble Shooting	stor
STEP 1				Beeim
Search for LAN Adapter on	PC's LAN Adapter List			
Jourre	TCP/IP Address	Ethernet Address	PC LAN Adapter Der	cription
Done Automaticaly I	192.168.0.2	B8-AE-ED-A0-F0-C4	Realtek PCIe GBE F	amily Controlle
Search PC's LAN-I/F				
STEP 2				
search for StarNIC on the	StarNIC List on the L	AN		
LAN	TCP/IP Address	Ethernet Address	Printer Server Descri	ption
Search StarNIC				
Search StarNIC				
Search StarNIC Property STEP 2-1 Set Temporary IP Address	IP Address for ARP S	m Setting		
Search StarNIC Property STEP 2-1 Set Temporary IP Address to StarNIC by ARP and Piro	IP Address for ARP S	III		•
Search StarNIC Property STEP 2-1 Set Temporary IP Address to StarNIC by ARP and Pin	IP Address for ARP 9 Ethernet Address of	III	list box above)	
Search StaNIC Property STEP 2-1 Set Temporary (P Address to StaNIC by ARP and Ping Do ARP and PING	IP Address for ARP 9 9 Ethernet Address of	m Setting Target StanNIC (Selected in	ist box above) Set IP ADDR +	► Aanually
Search StarNIC Property STEP 2-1 Set Temporary IP Address to StarNIC by ARP and PING Do ARP and PING STEP 3	IP Address for ARP S B Ethernet Address of	m Setting Target StatNIC (Selected in	list box above)	Aanually
Search StanNIC Property STEP 2-1 Set Temporary IP Address to StanVIC by ARP and Piny Do ARP and PING Do ARP and PING STEP 3 Open Web Page to Set up StanVIC	IP Address for ARP S B Ethernet Address of Please search for 55	III Target StatNIC (Selected in Ing of IP address via V/EB P	fist box above) Set IP ADDR 1 Set 22".	Aanually

- The "PC's LAN Adapter List" should fill in automatically, if it does not, select the <u>Search PC's LAN-I/F</u> to populate the info. Once you have your PC's IP address, move to Step 2 and select <u>Search StarNIC.</u>
- Plug the printer in, and plug it into the network. The IP of the printer should automatically populate as shown below. If the IP does not automatically populate, confirm that the printer is connected to the network, and confirm that the green power light is solid on the printer with no errors (Red Light).

🔣 Star Ethernet Utility - Ver.3.0).0		- • 💌	
Setup Utility for StarNIC (Ethernet I/F Card, DK-AirCash) Trouble Shooting				
STEP 1				
Search for LAN Adapter on	PC's LAN Adapter List			
yourre	TCP/IP Address	Ethernet Address	PC LAN Adapter Description	
Done Automaticaly !	192.168.0.2	B8-AE-ED-A0-F0-C4	Realtek PCIe GBE Family Controller	
Search PC's LAN-I/F	•		Þ	
STEP 2				
Search for StarNIC on the	StarNIC List on the L/	AN		
LAN	TCP/IP Address	Ethernet Address	Printer Server Description	
	192.168.0.22	00-11-62-09-AC-FE	IFBD-HE07/08	
Search StarNIC				
Property	•	m	•	
STEP 2-1				
Set Temporary IP Address to StarNIC by ARP and Ping	IP Address for ARP S	etting		
	Ethernet Address of T	arget StarNIC (Selected in	ist box above)	
Do ARP and PING			Set IP ADDR Manually	
STEP 3				
Open Web Page to Set up StarNIC	If you changed setting Please search for Sta	g of IP address via WEB P rNIC again according to "S	'age, STEP2''.	
Open the WEB Page			QUIT	

www.capretail.com, sales@capretail.com, support@capretail.com (800) 826-5009, Monday through Friday, 8:00am-5:30pm Central Time

- Write down the printer's IP Address, you will need it for the printer configuration. Press "QUIT" to exit.
- Open the Windows Start Menu and Select the <u>StarMicronics</u> folder. Select <u>POSPrinterRegister</u>. Check the <u>Common Control Object</u> check box at the top left and scroll down to the <u>TSP654E</u> in the Service object window, then select <u>Reg ></u>.

👌 OPOS POSPrinter Register 2009	
Common Control Object	
SP742MU-J TSP654C TSP654D TSP654E TSP654U TSP654C-J TSP654C-J TSP654D-J	
Exit]

Enter the IP Address for the printer in the "Port" field in the "OPOS Printer Setting" pop-up box.

OPOS POSPrinter S	Setting		×
Device Name : Emulation :	TSP654E STAR V	Model Name : Class :	TSP654E
Port : 192	.168 . 0 . 22		
Baud Rate :	9600 🔻	Parity Bit :	Non Parity 👻
Timeout(mS) :	10000		
CapRecPaperCut :	True	RecNvBitImage :	False 🔻
RecLineWidth :	576 🔻		
Reset	Default	CheckH	lealth
	OK	Can	el

Leave the other settings on the default options and select <u>CheckHealth</u>. Click <u>CheckHealth</u> in the new popup box. The printer should print a test page. If it does not, recheck the Green power light and the network connection and try again.

The printer will fail the health check if the CAP tool bar or POS is running. Please be sure to close all CAP programs before this step.

OPOS POSPrinter Setting				
Device N	ame :	TSP654E	Model Name :	TSP654E
Emulatio	💷 smj c	POS POSPrinter		
Port :	Statio	n ournal		
Baud Ra	@ R	eceipt		
Timeout(© s	lip		
CapRecF		Che	eckHealth	
RecLine\				
	(Ж	Cano	el

- Once the printer has passed the health check and successfully printed the test page, click 'OK" then "Exit."
- To install the Cash Drawer, open the Windows Start menu and browse to the <u>StarMicronics</u> folder, then select <u>CashDrawerRegister</u>. Check the <u>Common Control Object</u> check box and select <u>TSP650IIE</u> in the Service Object pane. Then click <u>Reg ></u> to open the setup as shown below.

OPOS CashDrawer Register 2009	
Common Control Object Service Object TSP650IID(2) TSP650IID(2) TSP650IIE TSP650IIE(2) TSP650IIU TSP650IIU(2) +	
Exit	

www.capretail.com, sales@capretail.com, support@capretail.com (800) 826-5009, Monday through Friday, 8:00am-5:30pm Central Time Enter the printer's IP address and leave the other settings on the default options. Select <u>CheckHealth</u> to test the cash drawer. If the Health Check is successful, press "OK" and "Exit". Proceed to the CAP Configuration menu to setup the printer and cash drawer in CAP.

Please be sure to close all CAP programs before doing a health check.

OPOS CashDrawer	Setting		—X —
Device Name : Emulation :	TSP650IIE STAR 👻	Model Name : Class :	TSP650IIE Auto 🗸
Port : 192	.168 . 0 . 22		
Baud Rate :	9600 👻	Parity Bit :	Non Parity 💌
Timeout(mS) :	10000		
On Pulse(mS) :	200	Off Pulse(mS) :	200
CapStatus :	False 🔻	Sensor Active :	High 💌
Reset	Default	Check	lealth
OK		Cancel	

All other interfaces for this model printer are similar but with different parameters and drivers, found here: <u>http://www.starmicronics.com/support/default.aspx</u>.